

QUICK START GUIDE

DURAFROST

Device for cooling and sanitizing glasses.



You will receive:

External 24Vdc power supply.
High pressure braided hose
with cylinder connection
(W21.8X1/14" thread).

You will require:

Cylinder with Co2 float for food
use with universal connector
Fixed wrench of 19
Fixed wrench of 27

WARNINGS:

- ! In case of Co2 leakages aerate the entire room at least for 15 min.
- ! The device cannot be used by children under the age of 8, by people with reduced physical, sensory, or mental abilities unless under direct supervision and by people without the necessary knowledge and experience.
- ! Children must never play with the appliance.
- ! Cleaning and maintenance should never be carried out by unsupervised children.
- ! Duravin+ must only be used with the power supply unit supplied.
- ! If the power cable of the external power supply is damaged, replace it only with cables provided by the manufacturer or the technical assistance service.
- ! Disconnect the machine at the end of the service and during the replacement of one of its parts.
- ! Never touch the regulator during work procedures.
- ! If no maintenance is required, never open it or remove its parts.
- ! Never use Duravin+ on full or damaged bottles.
- ! Never shake bottles of sparkling wine or champagne.
- ! Never point the bottle at anyone when removing the cap.
- ! Never reclose more than 15 bottles in a five-minute period.

Technical assistance and support: costumer-care@winefit.it

QUICK START GUIDE

Co2 cylinder connection

The regulator has a universal fitting that fits all standard Co2 cylinders (W21.8X1/14" thread)

– In case of any other thread / pitch contact the technical service for assistance. –

The working pressure is pre-set and doesn't require an adjustment process.

1.The working pressure is preset and does not require adjustment process.

2.Connect the high braid hose pressure on the back of the Dura frost using the 19 fixed wrench.

3.Connect the other end of the tube high pressure braid to the cylinder and tighten with fixed wrench of 27.



Electrical connection



4.Insert the connector of the 24v power supply in the back of Dura frost making sure of use the corner connector supplied together with the power supply.

5.Connect the cable to the mains.




Turn on Dura frost & initialization

6.Carefully open the cylinder and check that the tightenings are correct and do not feel gas leaks.

7.Switch on Dura frost using the power button in place on the side.

8.Dispense by pressing the button manual for a few seconds to fill the system

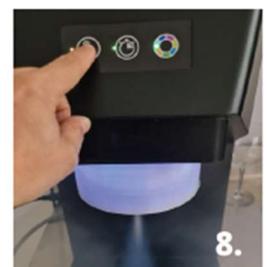

QUICK START GUIDE


Replacing the Co2 cylinder

9. Close completely the cylinder valve.

10. Dispense in manual mode until you no longer hear any Co2 leaking from the nozzle

11. Turn off Durafrost

12. Disconnect the high braid hose pressure from the cylinder and connect the braid hose to the new one.

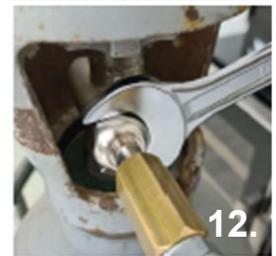

How to use

MANUAL mode




-Place your glass in correspondence of the nozzle centring its position.

-Press and hold the button for dispensing manual for the desired time, release when the glass will turn out sufficiently cold

PRESET TIME mode

-Place your glass in correspondence of the nozzle centring its position.

- Press the button for preset time delivery and wait until Durafrost finishes its cycle.

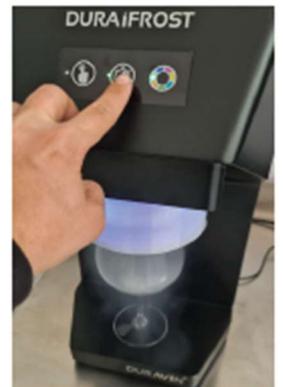

Illuminated nozzles:

The Duravin+ system is equipped with illuminated nozzles.



By pressing the coloured capacitive button, it is possible to interchange 7 different colours.



QUICK START GUIDE

TECHNICAL INFORMATION:

Model: Durafrost

Freq./Volt.: 100-240VAC  4VAC, 50/60 Hz

Current: 1.4A  2.5A

Power: 90W

Degree of protection: Class III



Co2 pressure: +60 bar

Acoustic pressure: 75 db(A) max

Attention!

Use Duravin+ only with the Mean Well power supply unit – GST90A24-P1M. 

Transport and Installation of Duravin+


The machine is shipped in its cardboard box with adequate protection inside. It is advisable to examine the condition of the machine upon arrival to verify that it has not been damaged during transport. During the operations of loading, lifting, handling and unloading of the machine, use the appropriate PPE supplied to each operator. The machine is supplied assembled in all its parts and able to start the activity. Do not place the machine near liquid and heat sources that could cause damage and pose a risk to the user. It is necessary to leave a space of about 15-20 cm on the side of the appliance to facilitate air circulation.

Disposal of the appliance

This appliance is marked in accordance with the European directive 2012/19/EU and the regulations on waste electrical and electronic equipment (RAEE). The symbol indicates that this product must not be disposed of with other household waste in the EU territory to prevent damage to the environment or human health due to improper disposal.



Explanation of symbols

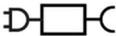 Class III	 Separable power unit	 Compliance of the appliance with EU directives
--	---	---

Further instructions for the Duravin+ Range available on our website.



The company relieves itself of any responsibility for a use other than that suggested for both the machine and the accessory.